

KIOSK INSTALLATION INSTRUCTIONS

CarisTouch 17”

MATERIALS NEEDED:

- Level
- Phillips Head Screw Driver – Long Thin (See Picture Below)
- Battery Power Drill
- ¼” Drill Bit (See Picture Below)
- ¼ Phillips Head Bit (See Picture Below)
- Tool Magnetizer For Screw Driver (See Picture Below)
- Screws (QTY 4, #8 Screw, 1¼) (See Picture Below)
- Anchors (QTY 4, #8) (See Picture Below)
- Pencil



KIOSK INSTALLATION INSTRUCTIONS

CarisTouch 17”

STEP 1: INSTALL WALL MOUNT PLATE:

- 1.) Remove Wall Mount Plate From Back Of Kiosk

Wall Mount Plate Is Fastened To Kiosk With Four Screws (2 on each side). These Screws Must Be Unscrewed Before Removing Plate From Kiosk.

- 2.) Position Wall Mount Plate Directly Over Power Outlet on Wall and Check For Level.

Wall Mount Plate Corner Must Align Directly With Side of Outlet Cover. See Picture.




- 3.) Mark Holes For Drilling With Pencil After Checking For Level on Each Side
- 4.) Drill Holes Using $\frac{1}{4}$ " Drill Bit
- 5.) Place Anchors In Drilled Holes and Tap With Back Of Screw Driver Handle Until Flush With Wall
- 6.) Fasten Plate To Wall Using #8 Screws and Cordless Drill With Phillips Head Bit.

KIOSK INSTALLATION INSTRUCTIONS

CarisTouch 17"

STEP 2: INSTALL POWER CORD AND POWER BRACKET TO KIOSK

- 1.) Remove Flange From Back Of Kiosk and Tuck In Orange PS2 Extension.

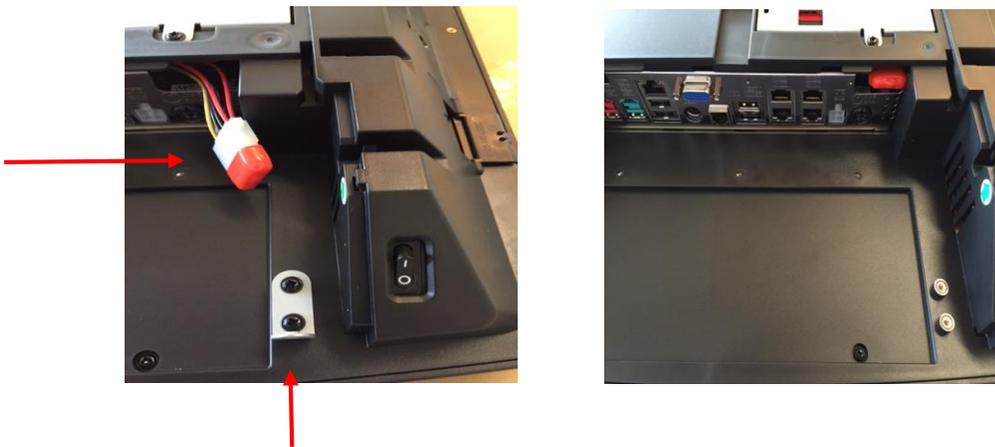

- 2.) Prepare Power Brick For Installation.


- a. Position Power Brick With Cord In Upper Right Hand Location



KIOSK INSTALLATION INSTRUCTIONS

CarisTouch 17"

- b. Place Bracket Over Power Brick (Note Circle In Upper Right Corner)

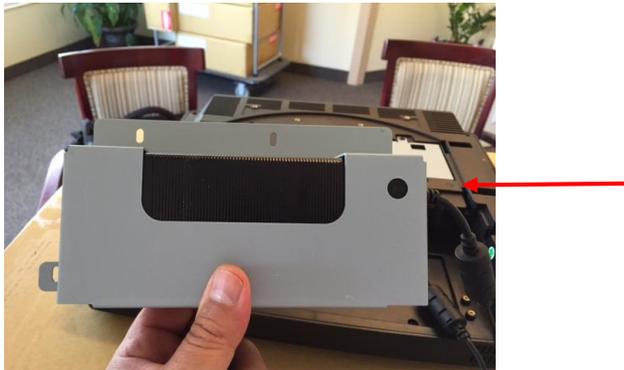

- c. Insert 1' Power Cord Into Power Brick On Left Hand Side. Cord Should Hang Down.



KIOSK INSTALLATION INSTRUCTIONS

CarisTouch 17"

3.) INSTALL POWER BRICK MODULE TO BACK OF KIOSK.


- a. Align Screw Holes On Top of Bracket With Holes On Kiosk
Ensure That Holes Are At Bottom of Slot As Pictured.



- b. Screw Bracket To Kiosk Using 2 Small Black Screws Provided.

4.) SECURE WIRING TO BACK OF UNIT

- a. Secure Cable To Bracket With Plastic Straps and Wrap Cable Up In Cavity.

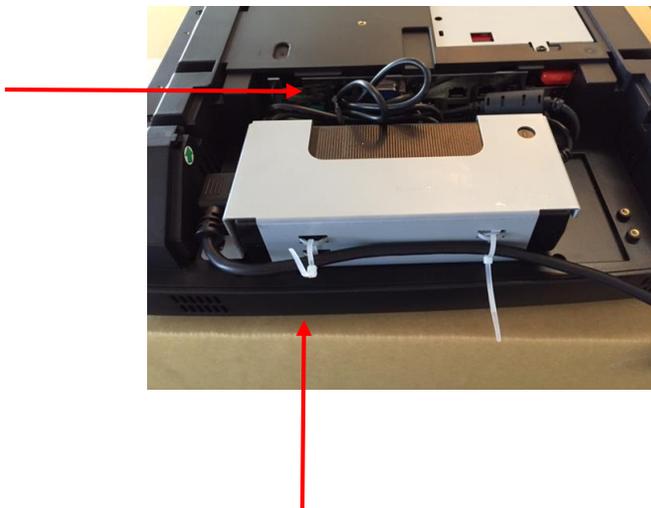

KIOSK INSTALLATION INSTRUCTIONS

CarisTouch 17"

5.) FIX KIOSK TO WALL BRACKET

- a. Align 4 Slots on Back of Kiosk with Hooks on Wall Mount Plate.



6.) FASTEN KIOSK TO WALL MOUNT PLATE WITH 4 SCREWS (Small Black Screws Provided)

